


Marsa Khairana  
(20)  
Khansa Bernessa  
(17)  
Dwi Putri Ridwan  
(10)  
Ayudya Krishna  
(07)  
Hafid eko (14)  
Martin A. R. G(21)

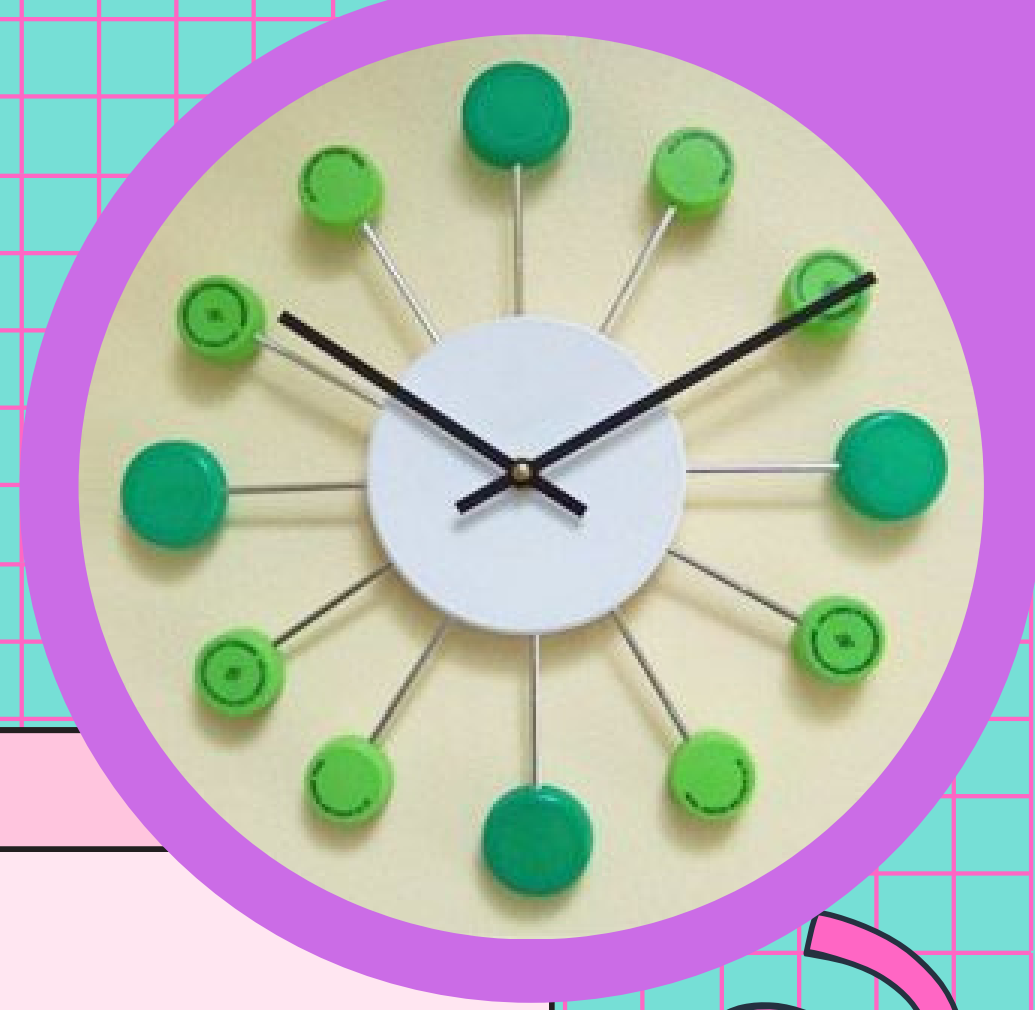

## Steps to make a wall clock from unused materials

- Necessary materials :**
1. Plastic Bottle Caps 12 Pieces.
  2. Sausage Skewer/skewers
  3. Lid of a Jar
  4. The clock machine that is still on with the clock hands.

1. Collect 12 plastic bottle caps
2. Make a hole on the side of each bottle cap the size of a sausage skewer, Cut each sausage skewer about 9 cm then insert it into the part of the bottle cap that has been given a hole, don't forget to give glue to make it strong and not easy to come off.
3. Take the lid of the jar that has been prepared, give a hole on each side, the number of holes is 12 according to the number of hours, remember the size between one hole and the other must be the same.

4. If you have given a hole, insert a sausage skewer that has been modified with the bottle cap earlier in each hole.
5. The next step is to prepare the clock machine.
6. Give a hole in the center of the jar lid to insert the clock machine so that it can be connected to the clock hands, don't forget to give the clock machine a battery so it can work.

**thank you  
let's recycle  
trash**